

Aeotec Water Leak Sensor user guide

Modified on: Tue, 24 Nov, 2020 at 2:42 AM



Aeotec Water Leak Sensor was developed to detect water and temperature while it is connected to [Aeotec Smart Home Hub](#). It is powered by Aeotec Zigbee technology.

Aeotec Water Leak Sensor must be used with an Aeotec Smart Home Hub or compatible ZigBee Hub in order to work.

Familiarize yourself with Aeotec Water Leak Sensor

Package contents:

1. Aeotec Water Leak Sensor
2. User manual
3. Health and safety guide
4. 1x CR2 battery

Important safety information.

- Read, keep, and follow these instructions. Heed all warnings.
- Clean only with a dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments and accessories specified by the Manufacturer.

Connect the Aeotec Water Leak Sensor

Video link: <https://youtu.be/LPrqfh9xFA0>

Steps in SmartThings Connect

1. From the Home screen, tap the **Plus (+) icon** and select **Device**.
2. Select **Aeotec** and then **Water Leak Sensor (IM6001-WLP)**.
3. Tap **Start**.
4. Choose a **Hub** for the device.
5. Choose a **Room** for the device and tap **Next**.
6. While the Hub searches:
 - Pull the **“Remove when Connecting”** tab found in the sensor.
 - **Scan the code** on the back of the device.

Using Aeotec Water Leak Sensor

Aeotec Water Leak Sensor is now a part of your Aeotec Smart Home Hub network. It will appear as a water sensor widget that can display leak status or temperature sensor readings.

This section will go over how to display all information in your SmartThings Connect app.

Steps in SmartThings Connect.

1. Open SmartThings Connect
2. Scroll down to your **Aeotec Water Leak Sensor**
3. Then **tap Aeotec Water Leak Sensor widget**.
4. On this screen, it should display:
 - Water leak
 - Temperature

You may use water and temperature sensor in an Automation to control your Aeotec Smart Home automation network.

How to remove Aeotec Water Leak Sensor from Aeotec Smart Home Hub

If your Aeotec Water Leak Sensor is not performing as you expected, you'll likely need to reset your water leak sensor and remove it from Aeotec Smart Home Hub to begin a fresh start.

Steps

1. From the Home screen, select **Menu**
2. Select **More Options** (3 dot icon)
3. Tap **Edit**
4. Tap **Delete** to confirm

Factory reset your Aeotec Water Leak Sensor

Aeotec Water Leak Sensor can be factory reset at any time if you come across any issues, or if you need to re-pair Aeotec Water Leak Sensor to another hub.

Video Link: <https://youtu.be/PgswcrEw-YE>

Steps in SmartThings Connect

1. **Press and Hold the recessed connect button** for five (5) seconds.
2. **Release the button** when the LED starts blinking red.
3. The LED will blink red and green while attempting to connect.
4. Use the SmartThings app and steps detailed in "Connect the Aeotec Waterleak Sensor" above.

SmartThings Water Leak Sensor technical specifications

Modified on: Wed, 17 Feb, 2021 at 9:43 PM

This page lists Aeotec product technical specifications for Aeotec Water Leak Sensor.

Name: Aeotec Water Leak Sensor

Model number:

EU: GP-AEOWLSEU

US: GP-AEOWLSUS

AU: GP-AEOWLSAU

Hardware required: Aeotec Smart Home Hub

Software required: SmartThings Connect (iOS or Android)

Radio protocol: Zigbee3

Power supply: No

Battery charger input: No

Battery type: 1 * CR2

Radio frequency: 2.4 GHz

Sensor:

Water leak

Temperature

Indoor/Outdoor use: Indoor only

Operating distance:

50 - 100 ft

15.2 - 40 m

Dimension of Button:

2.32 x 1.65 x 0.79 in

60 x 36 x 24 mm

Weight:

47 g

1.76 oz